

 
# PINNACLE

## Quick Guide

[www.thevaporBLUNT.com](http://www.thevaporBLUNT.com)

Read instructions carefully before first use.  
Please refer to the website for further information.

### Parts:

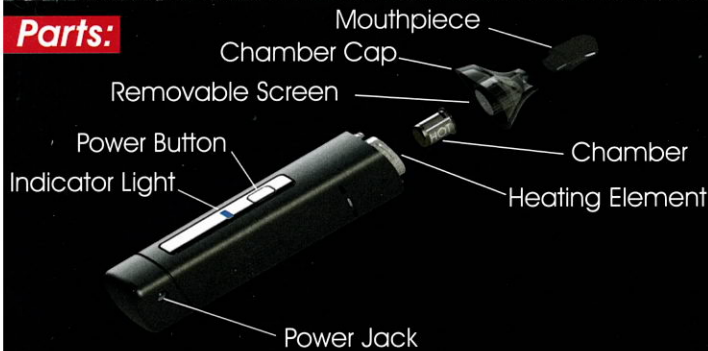

**WARNING:** Metal heating elements become very hot during use.

### Instructions:

**1st press:** For low temp. flashing white appears.



Solid white appears once ready.




**2nd press:** For high temp. flashing orange appears.



Solid orange appears once ready.



Solid blue = Fully Charged

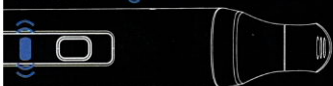

Slow Blue Flash = Charging



Solid Blue = Fully Charged



#### 1.) Loading the Pinnacle:

Using the provided Chamber, load finely ground material up to the base of the flare. (Caution: overpacking the chamber may result in uneven vaporization) Remove the Chamber Cap and load Chamber into the Heating Element. Then reattach the Chamber Cap.

#### 2.) Turning ON the Pinnacle:

Turn on your Pinnacle with one press of the Power Button. A flashing light will appear indicating that your Pinnacle is heating up. When the light turns solid, your desired temperature has been reached.

#### 3.) To Power OFF:

Press and hold the Power Button for two seconds and the unit shuts down. The unit will auto shutdown after ten minutes of use.

Your Pinnacle unit has two temperature settings; to change your settings press the button once. The light will change color to indicate the heat selection.

#### White: Low heat setting (around 375°)

This temperature has been tested to provide the best all-around vaporization for most users.

**Orange:** High heat setting (around 390°) This temperature setting will increase your vaporization rate from the low setting.


### Alternating Blue Flash = Low Battery

### Charging:

During operation, a low battery will be indicated by an alternating flash of blue and the light of the current setting as a warning. Then the unit will auto shutdown to protect the battery. Pinnacle should not be used while connected to the charger.

Plug the provided power supply into the Power Jack. A slow flashing blue light indicates charging in process. A solid blue light indicates full charge. A full charge is recommended before first use. A full charge from empty to full may take around three hours.

## Accessories:

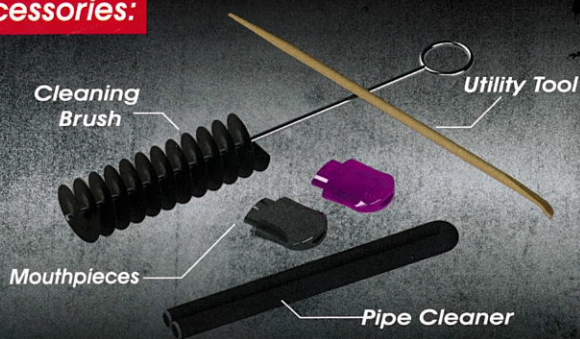


## Cleaning and Maintenance:

After each use, clear all particles residing in the Chamber using the included Utility Tool and/or Cleaning Brush.

### 1. A-B) Cleaning The Screen:

The Removable Screen inside the Chamber Cap is removed with the Utility Tool. First remove the Mouthpiece and insert the thin end of the Utility Tool through the vapor path. The screen will fall out. Clean with hot water or rubbing alcohol.

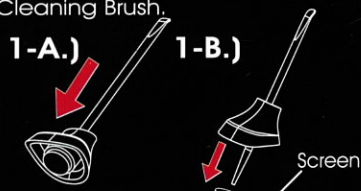

### 2.) Cleaning The Chamber:

Completely remove the Chamber from the Pinnacle. Use the Cleaning Brush and/or the



Utility Tool to remove any excess particles inside and around. Clean the Chamber with hot water or rubbing alcohol. **DO NOT** immerse the Pinnacle in liquid of any kind, it will damage the heating element!



**14mm Micro Shower head Attachment Sold Separately**

## Important Safety Information:

**WARNING:** Internal parts of the Pinnacle reach high temperatures. Use caution when accessing the Chamber.

- Keep out of reach of children.
- Do not expose your Pinnacle to external heat above 120°F.
- Do not puncture or incinerate.
- Do not dismantle the Pinnacle beyond the Cleaning and Maintenance instructions. Doing so will void the warranty.
- Do not drop or crush the Pinnacle.
- Do not use if damaged.
- Dispose of battery in accordance with your local regulations.
- Use only provided power supply to charge battery. Use of any other power supply is dangerous and will void the warranty.
- Operating temperature range: 14°F. to 104°F.

## Technical Specifications:

Typical Battery Operating Time: Approx 45 min.  
Chamber Temperature: 375°F - 390°F  
Time to Fully Recharge Battery: 3 Hours Minimum  
Battery Type: Li-Ion

## Warranty Information:

The Pinnacle has a 1 Year Limited Product Warranty which covers your vaporizer against defects in manufacturing, parts and labor. If your Pinnacle breaks during warranty coverage, we will fix or replace it. The battery has a 90 Day Limited Warranty. The unit must be returned in its original packaging along with receipt of purchase.

[www.thevaporblunt.com](http://www.thevaporblunt.com)